
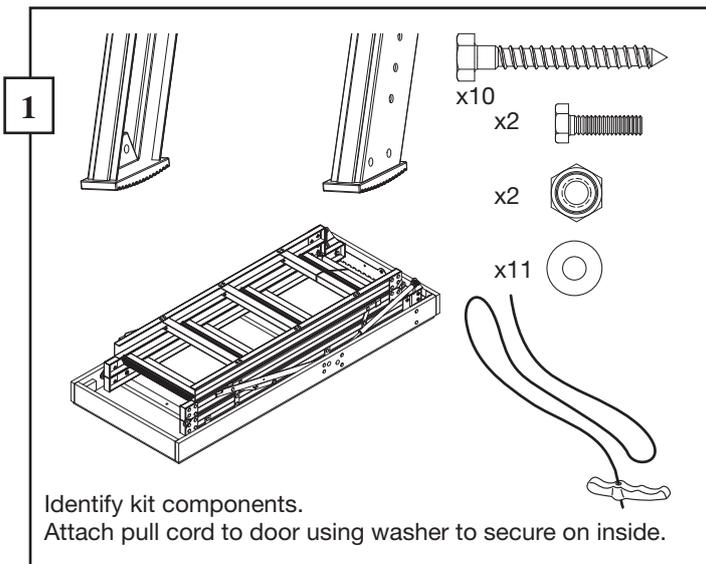



#### WARNING

Before you start installing your new Kimberley Ceiling Mounted Folding Attic Ladder, you must read and understand the following:

1. Installation requires two people.
2. DO NOT open folding attic ladder until it is securely installed in the ceiling.
3. This ladder is suitable for ceiling height 2340 - 3120mm. Ensure this ladder is suitable for your situation. Do not use this ladder if it is not suitable.
4. This folding attic ladder is completely assembled and is ready for installation. Do not disassemble it to install.
5. The gas struts on this folding attic ladder are under compression. Use extreme caution when checking, or using this ladder. Never try to remove the gas struts when the ladder is in the open position.
6. Make sure there is no wiring or piping that the saw or drill can come in contact with during installation.
7. Opening or standing on the ladder's climbing sections prior to properly fastening to ceiling joists could cause serious personal injury.
8. If the premises has roof trusses, do not cut the ceiling joists without consulting an engineer for approval.
9. Improper installation of this attic ladder may put undue stress on its components and may result in failure and serious personal injury.

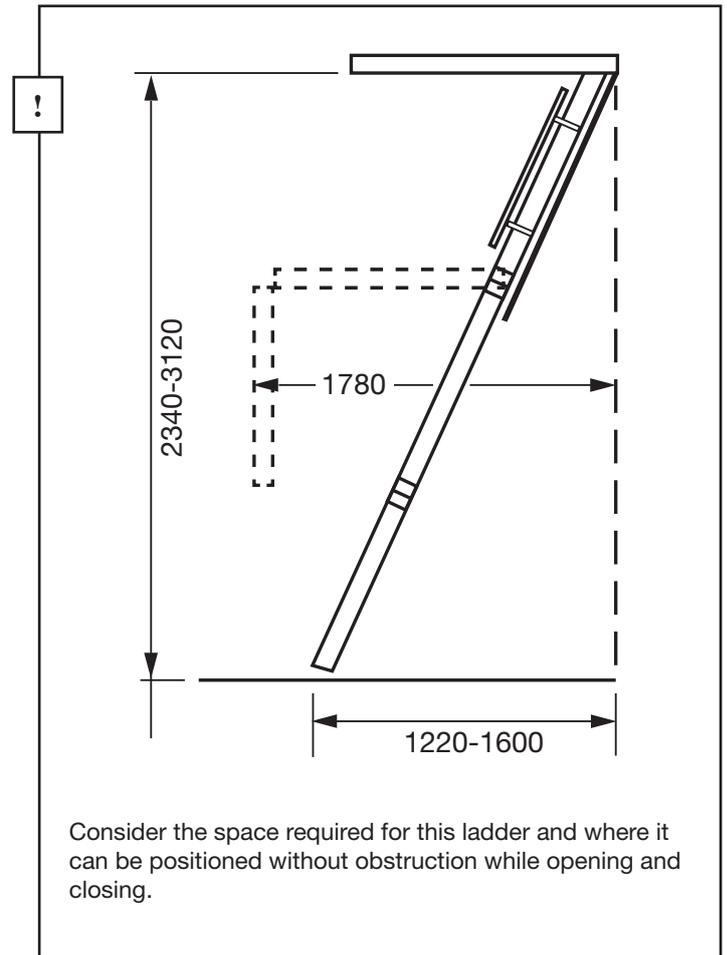


**Note:** If you prefer not to use the enclosed nylon cord and handle to open the ladder door, a hook pole with eye bolt is available as an optional upgrade. Please contact Kimberley Products for further details.

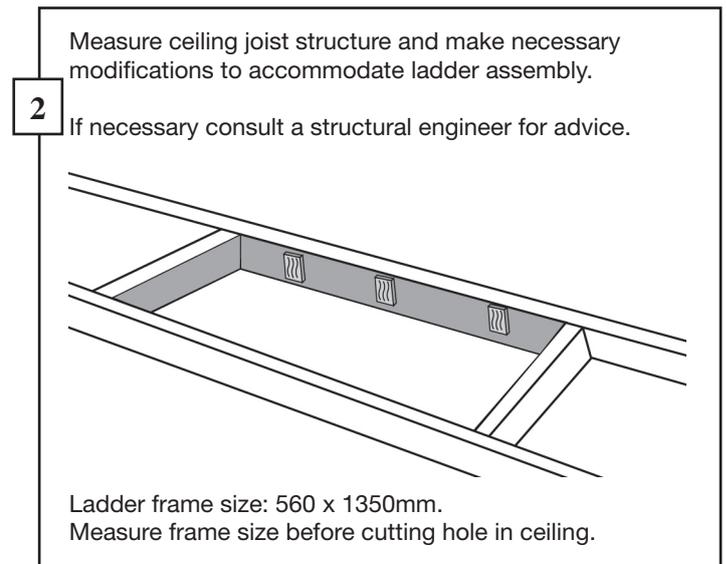

**WARNING!**

**DO NOT CLIMB ON LADDER UNTIL SAFELY SECURED TO FRAME STRUCTURE AND ADJUSTED TO LENGTH.**


3

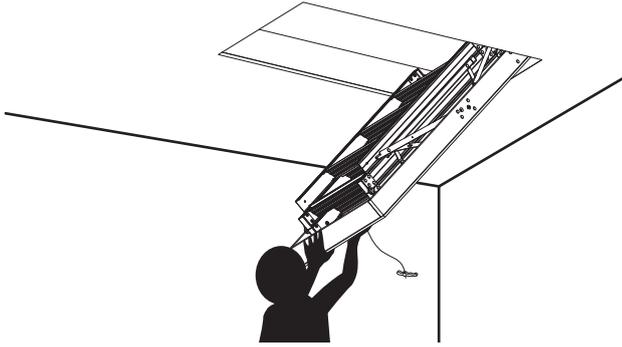

Lift ladder into hole and support in place.


Measure diagonals between corners to ensure ladder frame is square.

4

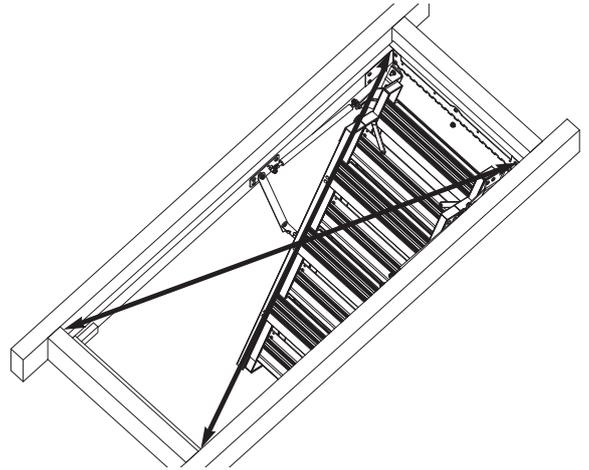


Secure ladder to frame with coach screws and washers.

5

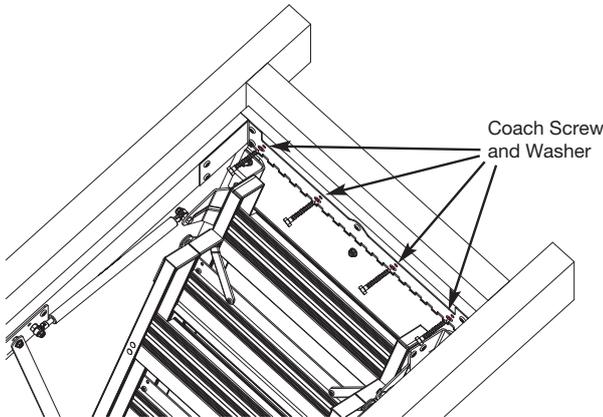


Use packers as required.

6

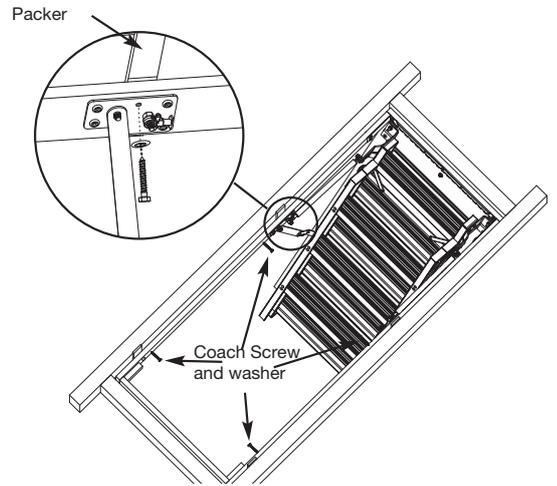

Measure from end of middle section to floor. Mark length on lower section and cut off excess with hacksaw.

7

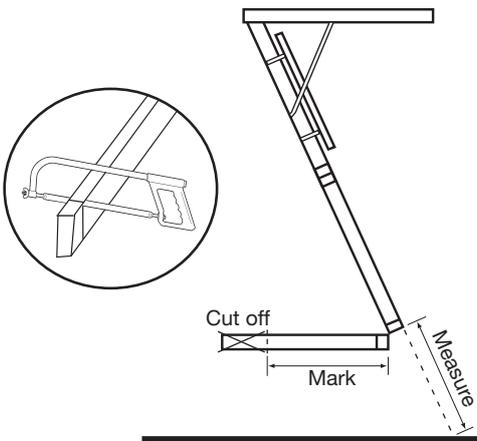

Attach feet to ladder. Drill 6.5mm hole and secure with bolt and lock nut.

8

